
## **AQUAvalve**<sup>™</sup>

Simple care guidelines

## Your 1Pot XL system set-up guidelines





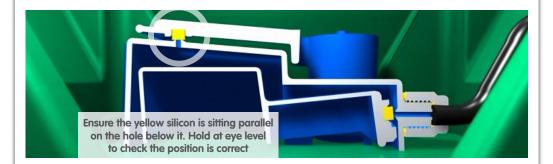

## Ensuring that the AQUAvalve floods and drains correctly



Making sure your AQUAvalve floods and drains correctly is simply achieved and only takes a few seconds.

- 2 Hold the AQUAvalve at eye level so that you can see the yellow silicon fitted to the top float resting on the hole below it.
- **3** The yellow silicon must create a tight seal when touching the hole.

4 If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the yellow silicon, drop the float and hold at eye level again. Repeat the procedure if necessary.

## Care and maintenance

At the end of your growing season, clean the AQUAvalve using warm soapy water. Using an old tooth brush will help.


The AQUAvalve is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.

At this point is it advisable to remove the yellow silicones to avoid them being lost.

2 It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve nozzle, this will remove any lime scale build up that may have occurred during the growing season.

> Blowing through the AQUAvalve nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve nozzle.

This will potentially damage the AQUAvalve beyond repair.

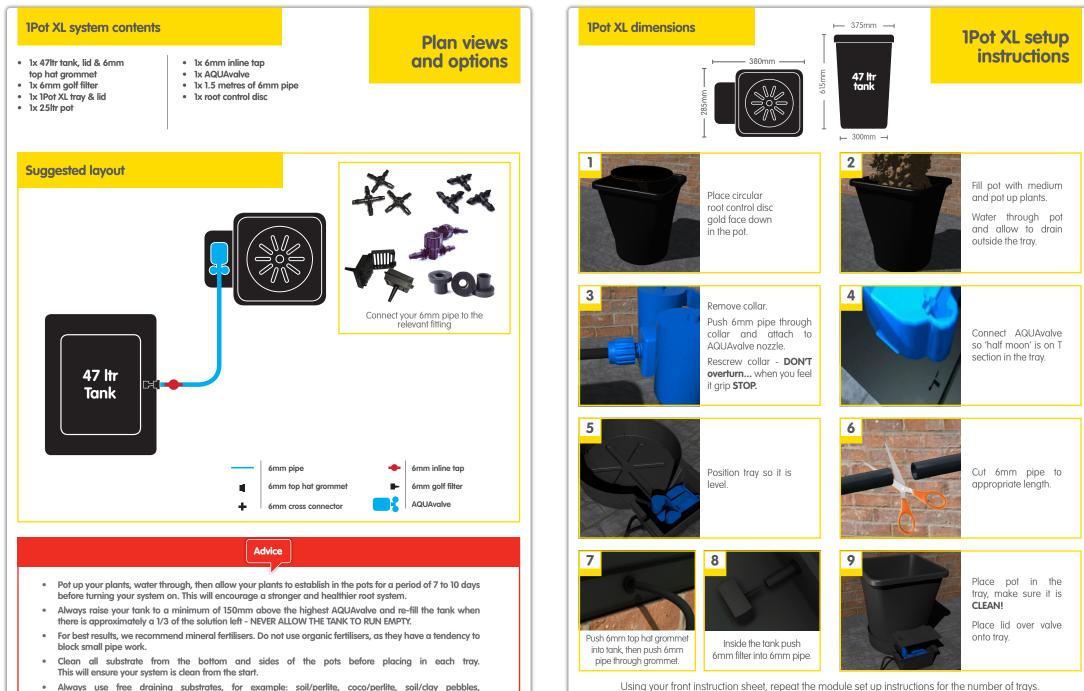

coco/clay pebbles, rockwool/clay pebbles.

mail@autopot.co.uk | www.autopot.co.uk | +44 (0)844 8581520

Advice

If you require any guidance **email - mail@autopot.co.uk** 

Allow your plants to establish for 7-10 days before turning system on