

Iso-Mix

Service Instructions



BLAUBERG
Ventilatoren

EN

BLAUBERG Company is happy to offer your attention a new high-quality inline mixed-flow fan in sound-insulated casing Blauberg Iso-Mix .

The solid team of high-qualified professionals with many years of working experience, technological innovations in design and production, high-quality components and materials from the top worldwide producers have become the precondition for the best fan in its class.

The fan Blauberg Iso-Mix is a symbiosis of perfect quality, high performance and silent operation.

INTRODUCTION

The present service instruction contains a technical description, technical data sheets, operation and mounting guidelines, safety precautions and warnings for safe and correct operation of the BLAUBERG Iso-Mix fan.

USE

The fan Iso-Mix is designed for exhaust or supply ventilation of living spaces, kitchens, bathrooms, offices, shops, garages and other residential and public premises heated during winter time. The fan may be integrated into the air ductworks.

The fan is available for round Ø 100, 125, 150, 160, 200, 250 and 315 mm air ducts.

COMPLETE SET

- fan - 1 item;
- screws and dowels - 4 items;
- plastic screwdriver (for the models with timer) - 1 item;
- service instruction;
- packing box.

The fan design is regularly improved, so some models can slightly differ from those ones described in this service instruction.

BASIC CHARACTERISTICS


The fan designations, outer view, overall and connecting dimensions are shown in table 1 and in fig. 1.

For the fan technical data, refer to the sticker on the fan casing and to the product catalogue at the manufacturer's site.

Table 1

Type	Dimensions [mm]					Weight [kg]
	∅D	B	B1	L	H	
Iso-Mix 100	98	214	243	505	251	4,6
Iso-Mix 125	123	214	243	474	251	4,6
Iso-Mix 150	148	247	273	579	263	6,1
Iso-Mix 160	159	281	327	566	284	6,3
Iso-Mix 200	198	293	386	550	295	8,0
Iso-Mix 250	248	358	445	658	360	15,0
Iso-Mix 315	313	432	520	780	434	25,0

Fig. 1

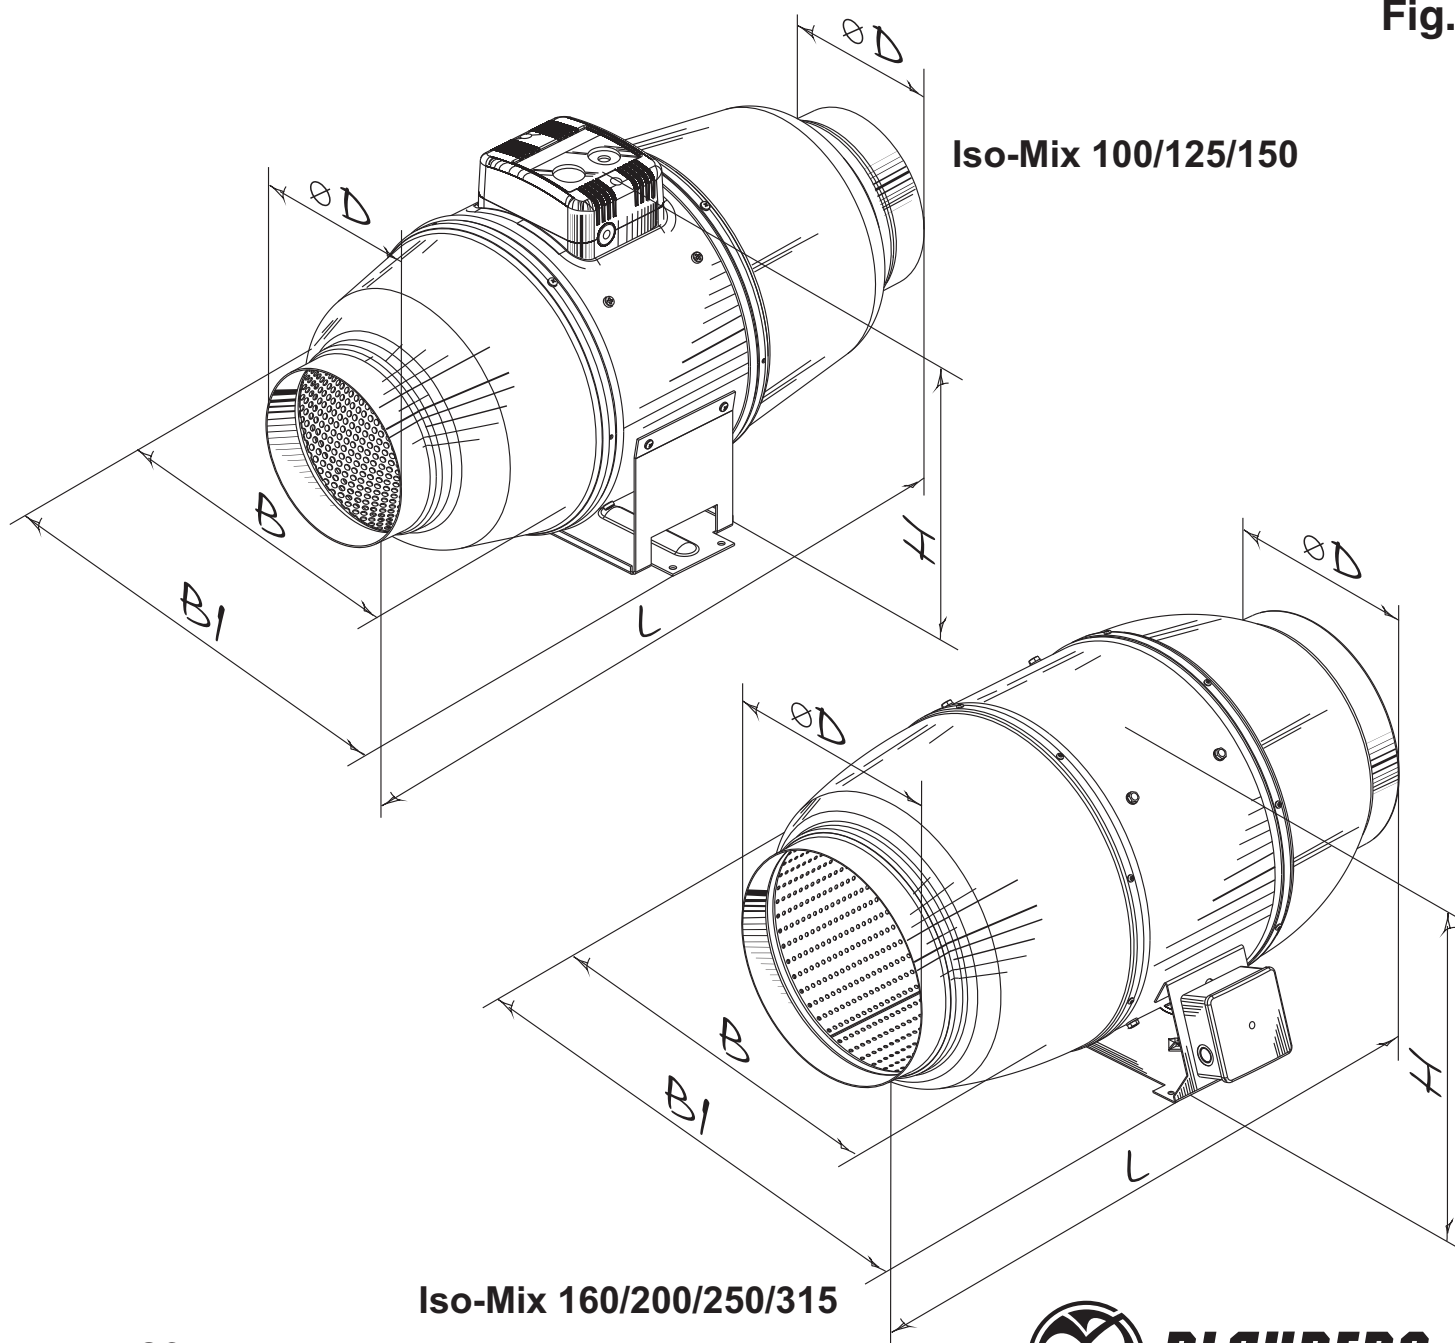

MODIFICATIONS AND OPTIONS

T adjustable run-out timer regulated from 2 to 30 minutes.

US three-position speed switch integrated in the fan (Min speed - off - Max speed)

FR - built-in smooth speed controller from 0 to 100%.

The power cable is equipped with a IEC C14 plug as a standard.

The cable modification with a standard electric plug is also available (**FR1**).

G/GT - smooth speed controller with an electronic thermostat and an external temperature sensor that is fixed on 4 m cable.

The power cable is equipped with a power IEC C14 plug as a standard.

The cable modification with a standard electric plug is also available (**G1**).

GI/GTI - smooth speed controller with an electronic thermostat and a temperature sensor integrated into the air duct.

The power cable is equipped with a power IEC C14 plug as a standard.

The cable modification with a standard electric plug is also available (**GI1**).

W power cable equipped with a IEC C14 plug as a standard.

Modification with a standard electric plug is available (option **W1**).

ELECTRONICS CONTROL LOGIC

The model Iso-Mix _____ T switches on when the voltage is supplied to the terminal LT by the external switch (i.e., light switch).

After the control voltage is disconnected the fan continues operating during the time T, which is regulated from 2 till 30 minutes.

To regulate the turn-off delay time turn the potentiometer T clockwise to increase it to max. 30 min or anticlockwise to decrease it to min. 2 min (Fig. 33)

Warning! *The timer circuit is under mains voltage!*

Disconnect the fan from power mains prior to any adjustment operations.

The fan delivery set includes a specially designed plastic screwdriver for the timer setting adjustments.

Do not use a metal screwdriver, knife, etc. for adjustment operations not to damage the circuit board.

The model Iso-Mix _____ FR (fig. 32) is equipped with a speed controller to turn the fan on/off and for smooth control of the fan speed over the range from minimum to maximum value.

The model Iso-Mix ____ G/GI (fig. 31) is equipped with a temperature and speed controller with external temperature sensor for automatic speed (air flow) regulation depending on ambient temperature.

The electronic module has two control knobs:
to set the motor speed;
to set the electronic thermostat set point.

The thermostat LED pilot light on the fan casing glows red when the transported air temperature is above the temperature set point.

To set the thermostat set point rotate the thermostat control knob clockwise to increase it and anticlockwise to decrease the value.

To set the speed (air flow) control set point rotate the speed control knob in the same way.

The fan has two operating logics:
based on temperature and timer:

temperature-based logic (G/GI):

to keep air temperature within 2°C. In this case the speed switches are rare.

When air temperature rises up to the thermostat set point, the fan switches to maximum speed.

When air temperature drops down 2°C below the set point or when the initial temperature is below the set point, the fan runs with the speed set by the speed controller.

timer-based logic (GT/GTI):

to keep air temperature exactly. The fan switches more frequently as compared to the previous pattern but the minimum time intervals in any case are not less than 5 minutes.

When the air temperature rises up to the thermostat set point, the fan switches to maximum speed. Synchronously the speed switch delay timer is activated for 5 minutes.

When the air temperature drops down below the set point, the fan keeps running on maximum speed for additional 5 minutes and then switches back to set speed.

If the initial temperature is below the set thermostat point, the fan runs from beginning with the set speed by the speed controller.

SAFETY RULES

All operations related to the fan electrical connections, servicing and repair works are allowed only after the fan disconnection from power mains.

All mounting and servicing operations are allowed for duly qualified electricians with valid electrical work permit for electric operations at the units up to 1000 V after careful study of the present user's manual.

The single-phase power grid must comply with the acting local electrical norms and standards.

The fixed electrical wiring must be equipped with an automatic switch that is used for connection of the fan to power mains with gap on all poles at least 3 mm.

The circuit breaker trip current must be in compliance with the fan current consumption, refer to the sticker on the fan casing.

Make sure the impeller and the casing are not damaged before connecting the fan to power mains.

The casing must be free of any foreign objects which can damage the impeller blades. Disconnect the fan from power mains prior to any servicing and repair operations! Misuse of the product or any unauthorized modification are not allowed.

The product is not allowed for use by children and persons with reduced physical, mental or sensory capacities, without proper practical experience or expertise, unless they are controlled or instructed on the product operation by the person(s) responsible for their safety. Supervise the children and do not let them play with the product.

Take steps to prevent ingress of smoke, carbon monoxide and other combustion products into the room through open chimney flues or other fire-protection devices. Sufficient air supply must be provided for proper combustion and exhaust of gases through the chimney of fuel burning equipment to prevent back drafting.

The maximum permitted pressure difference per living units is 4 Pa.

Transported medium must not contain any dust or other solid impurities, sticky substances or fibrous materials.

The fan is not rated for operation in a media that contains hazardous or explosive materials and vapours, i.e. spirits, gasoline, insecticides, etc.

Do not close or block the fan intake or exhaust vent not to disturb the natural air passage. Do not sit on the fan and do not put objects on the fan.






Follow the guidelines of this service instructions to ensure durable operation of the product.

The fan is designed for vertical or horizontal mounting to the wall, ceiling or installation on the floor, fig. 2-4.

The air motion direction in the system must match the pointer on the fan casing.

While mounting protect the fan against water ingress in the following way:

1. In case of the vertical mounting position: install a protecting hood on the top, fig. 5.
2. In case of any mounting position: connect air duct on both sides of the fan, fig. 6.

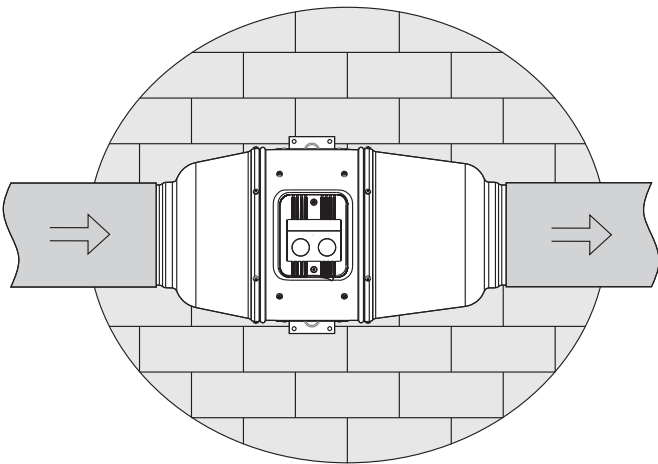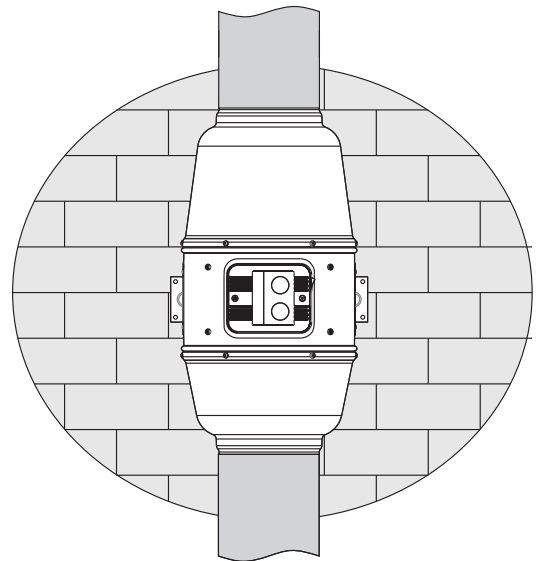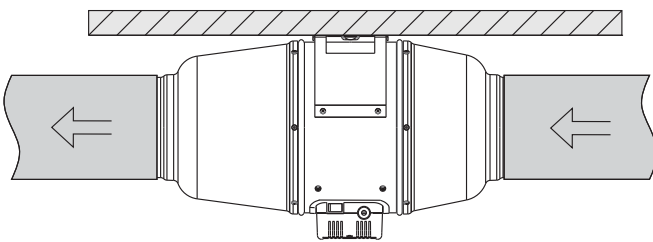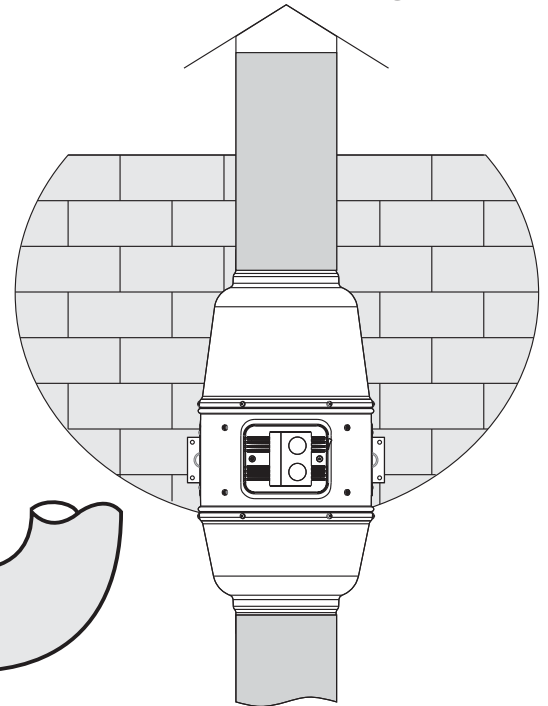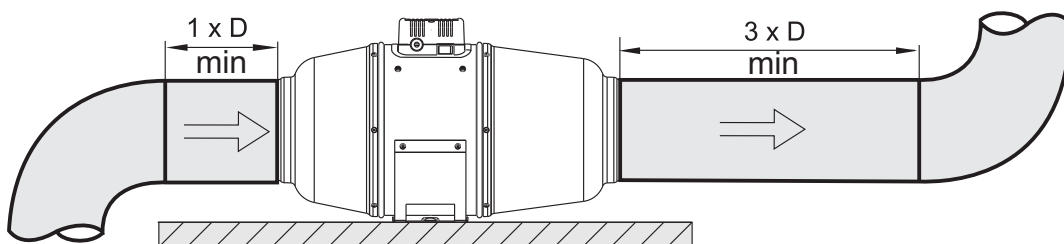Fig. 2**Fig. 3****Fig. 4****Fig. 5****Fig. 6**

Mounting sequence:

- cut power supply off, fig. 7;
- mark the fastening holes on the mounting surface through the respective holes in the fixing bracket drill the holes and fix the fan with screws, fig. 8-10;
- connect the air ducts on both sides of the fan, fig. 11.

Fig. 7

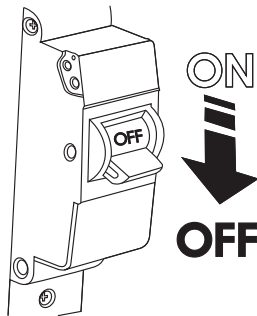


Fig. 8

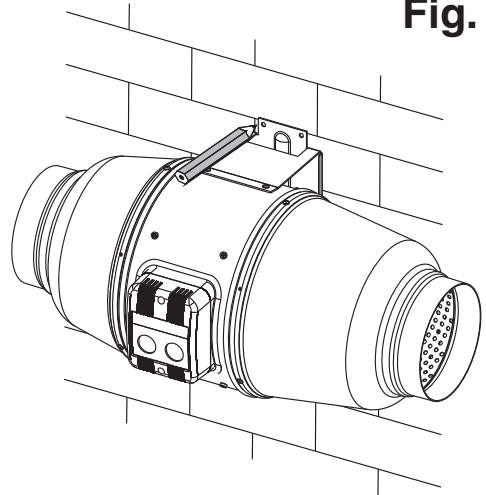


Fig. 9

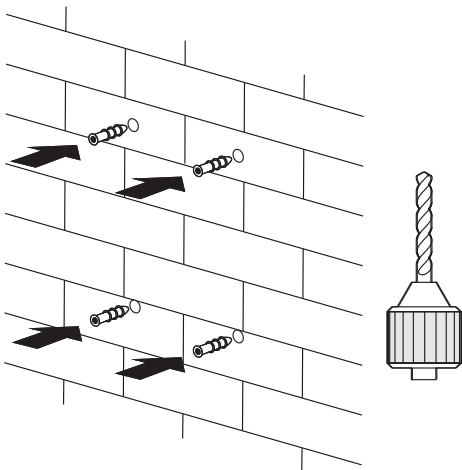


Fig. 10



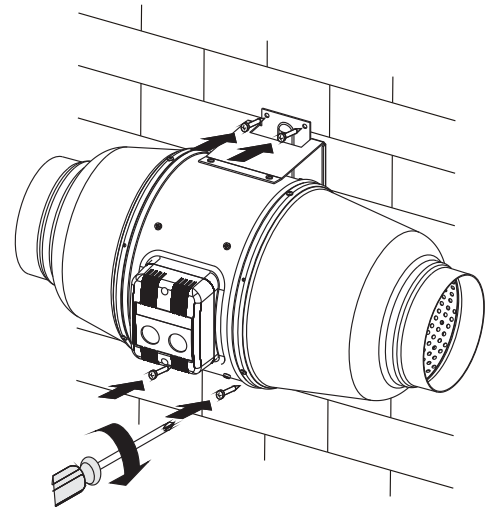



Fig. 11

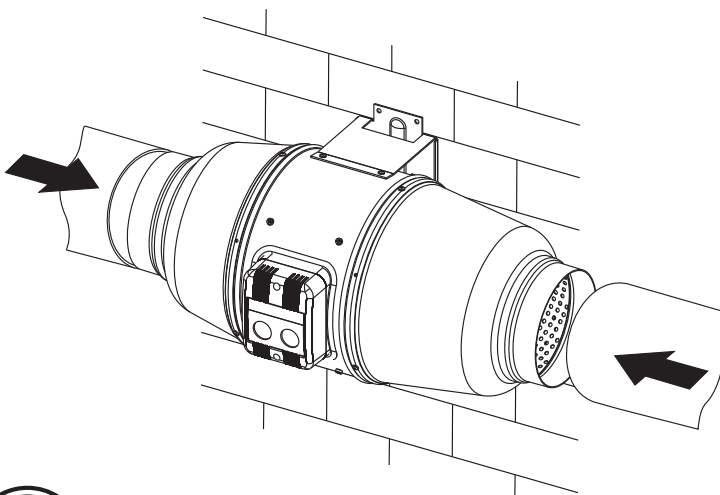


CONNECTION TO POWER MAINS

Iso-Mix 100/125

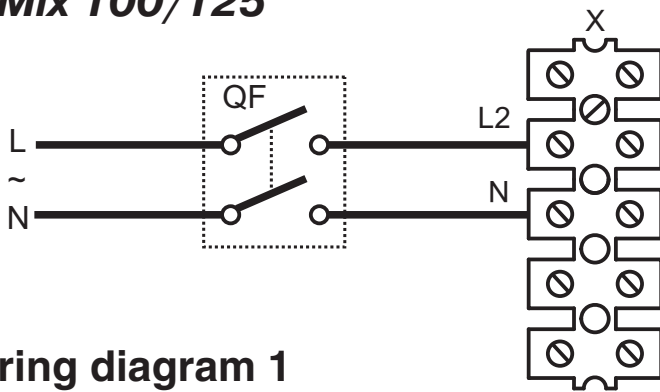



 fan runs at MAX speed

Wiring diagram 1

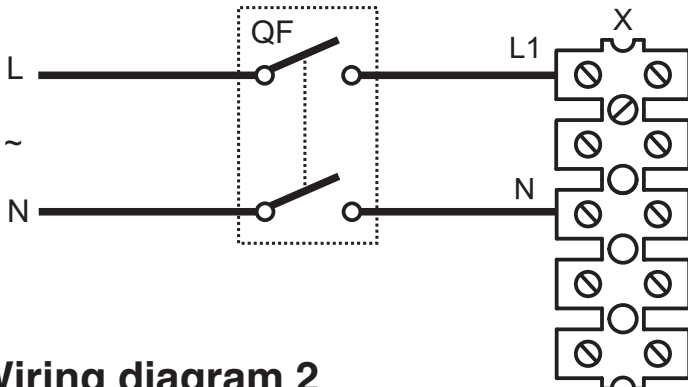


 fan runs at MIN speed


Wiring diagram 2

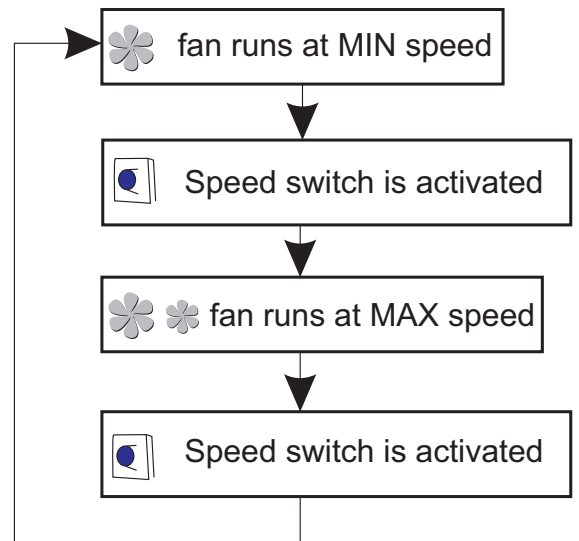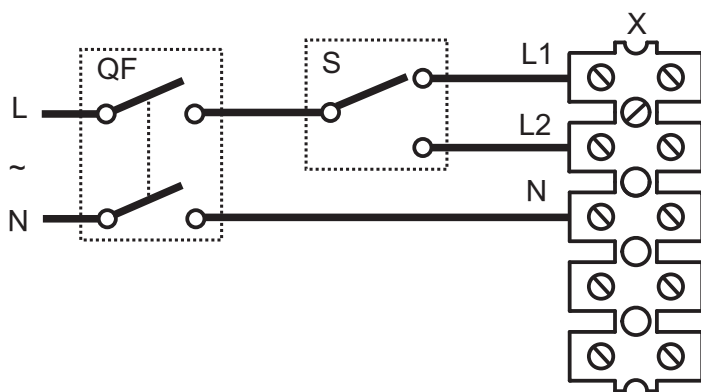

Wiring diagram 3

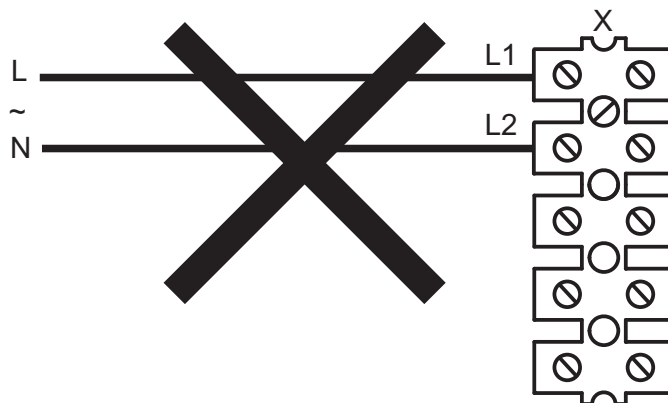


Wiring diagram 4

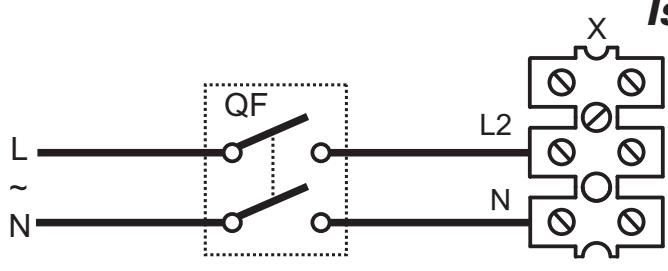



fan runs at MAX speed

Wiring diagram 5

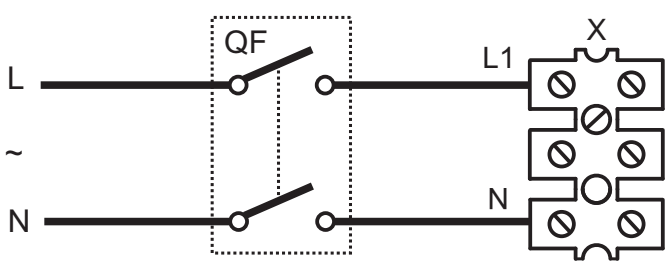


fan runs at MIN speed

Wiring diagram 6

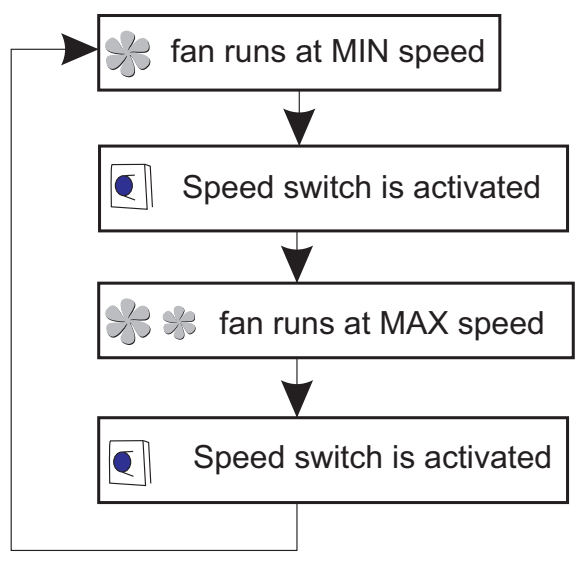
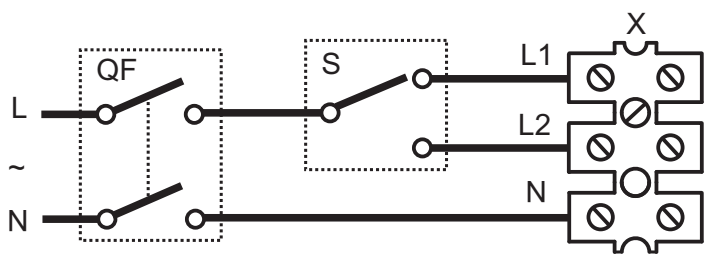


Wiring diagram 7


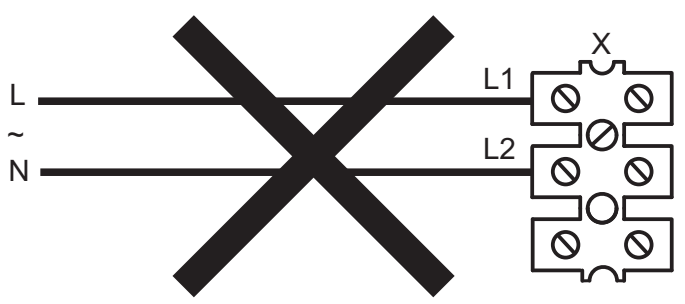


Wiring diagram 8

Iso-Mix 100/125/150/160/200/250 T

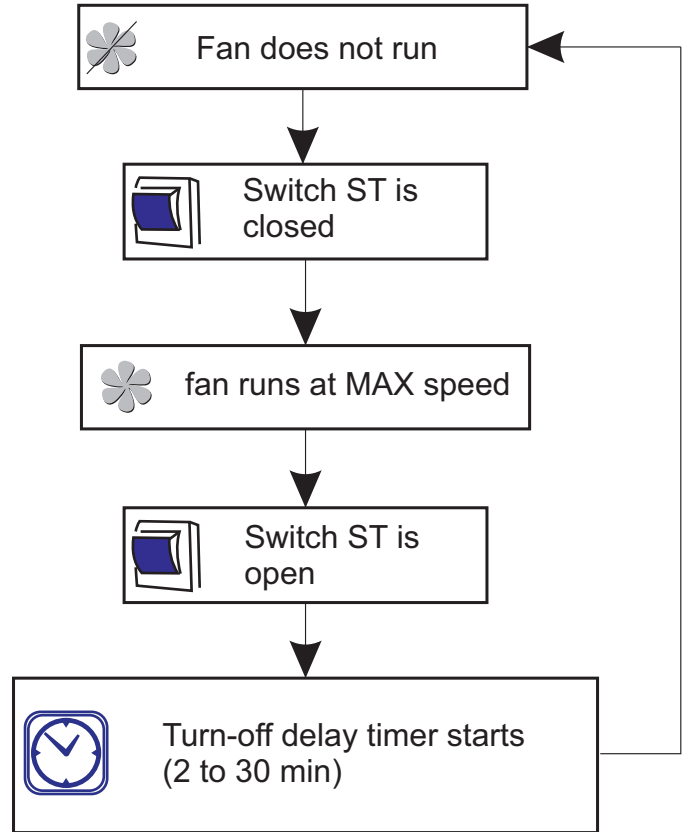
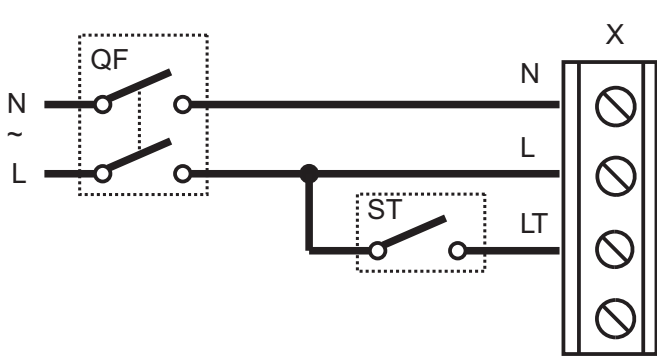


Wiring diagram 9

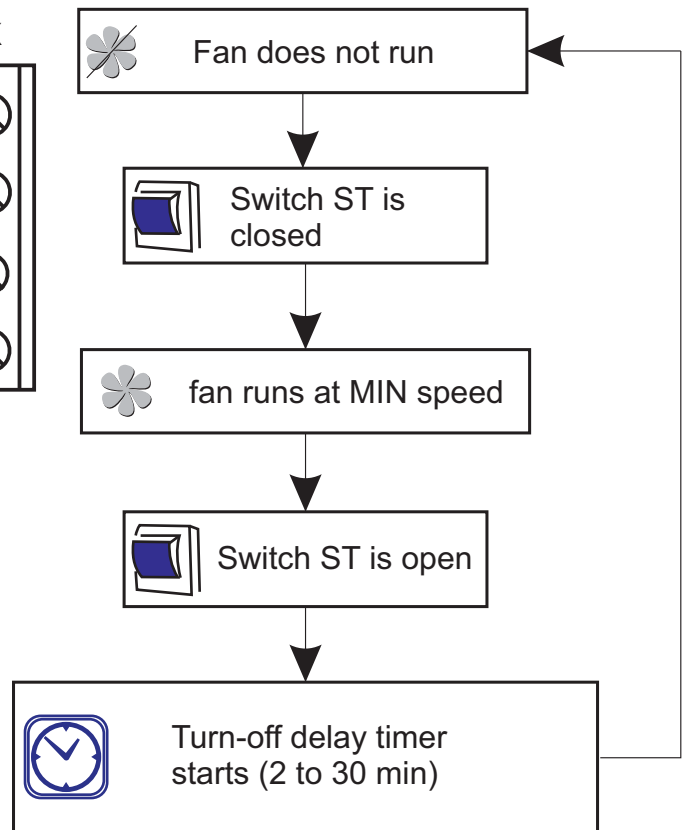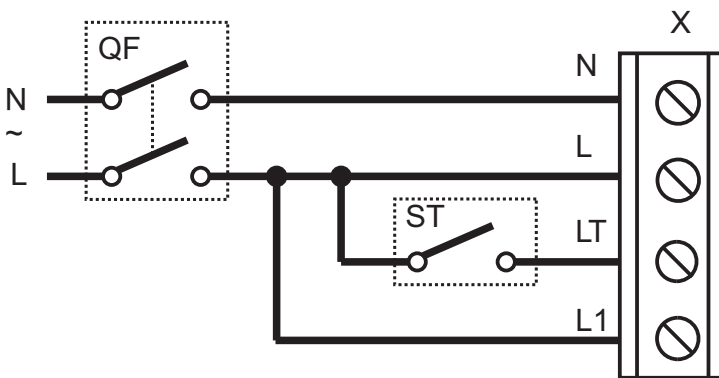


Wiring diagram 10

Iso-Mix 100/125/150/160/200/250 T

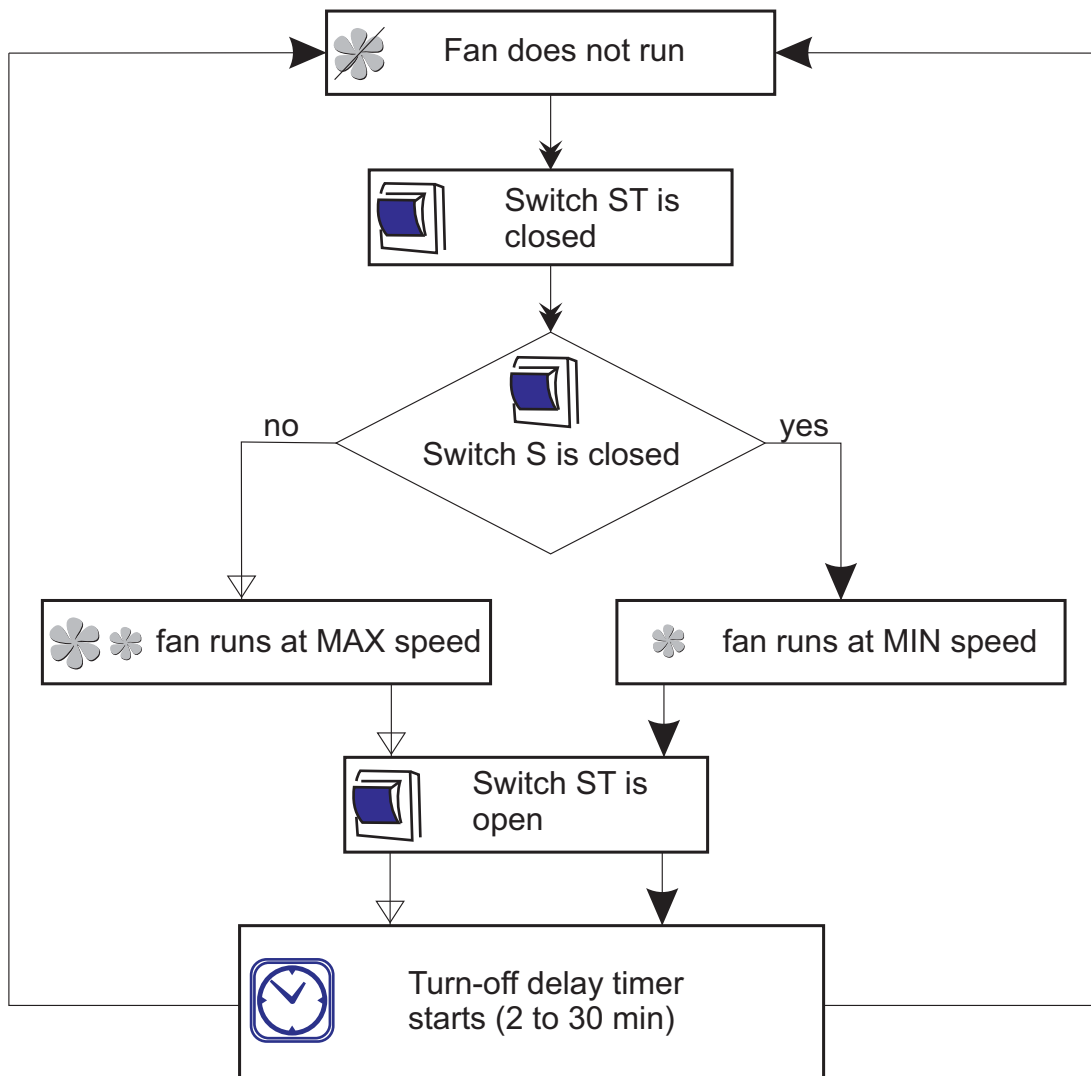
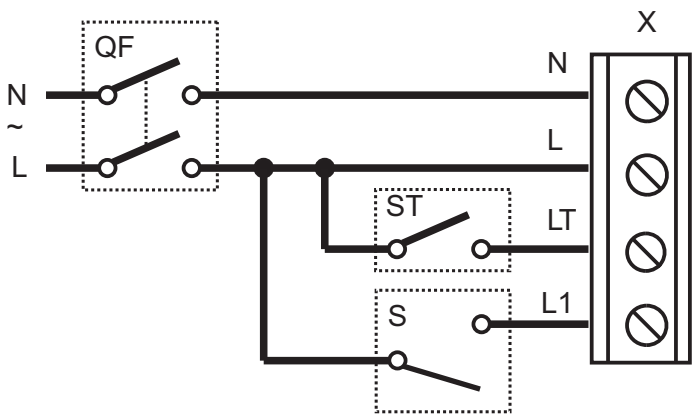


Wiring diagram 11


Iso-Mix 315 T


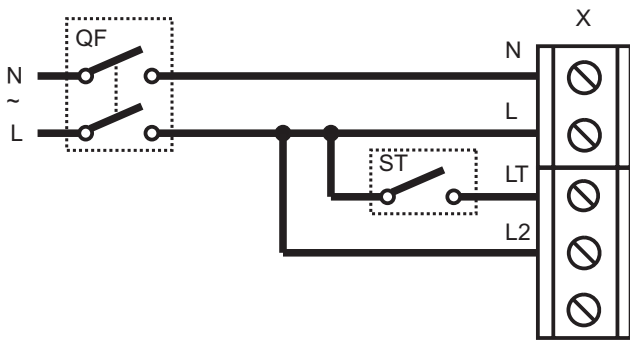


Wiring diagram 12

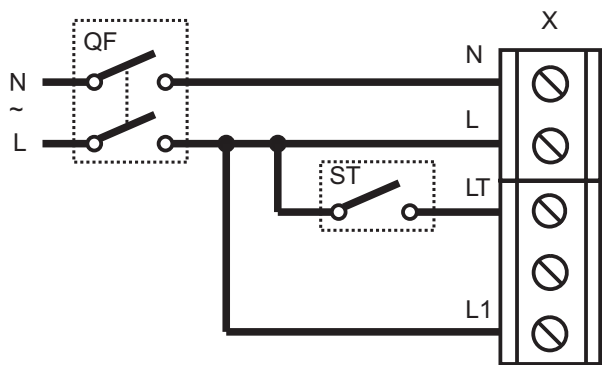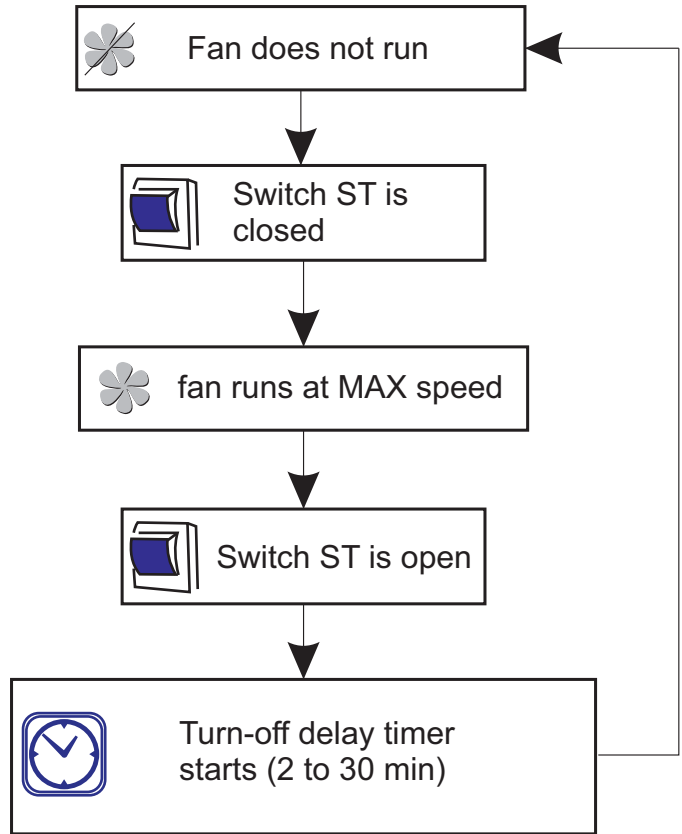


Wiring diagram 13

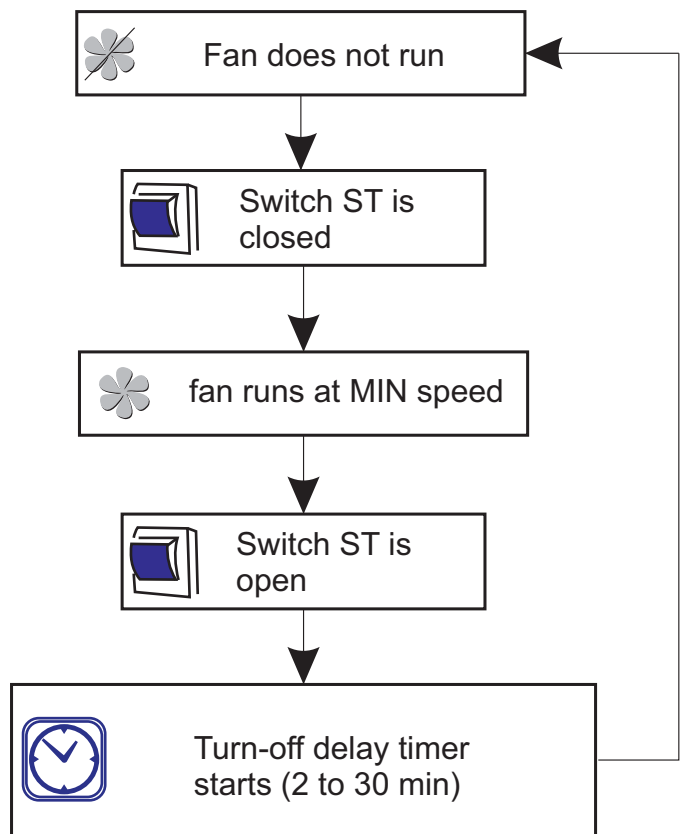

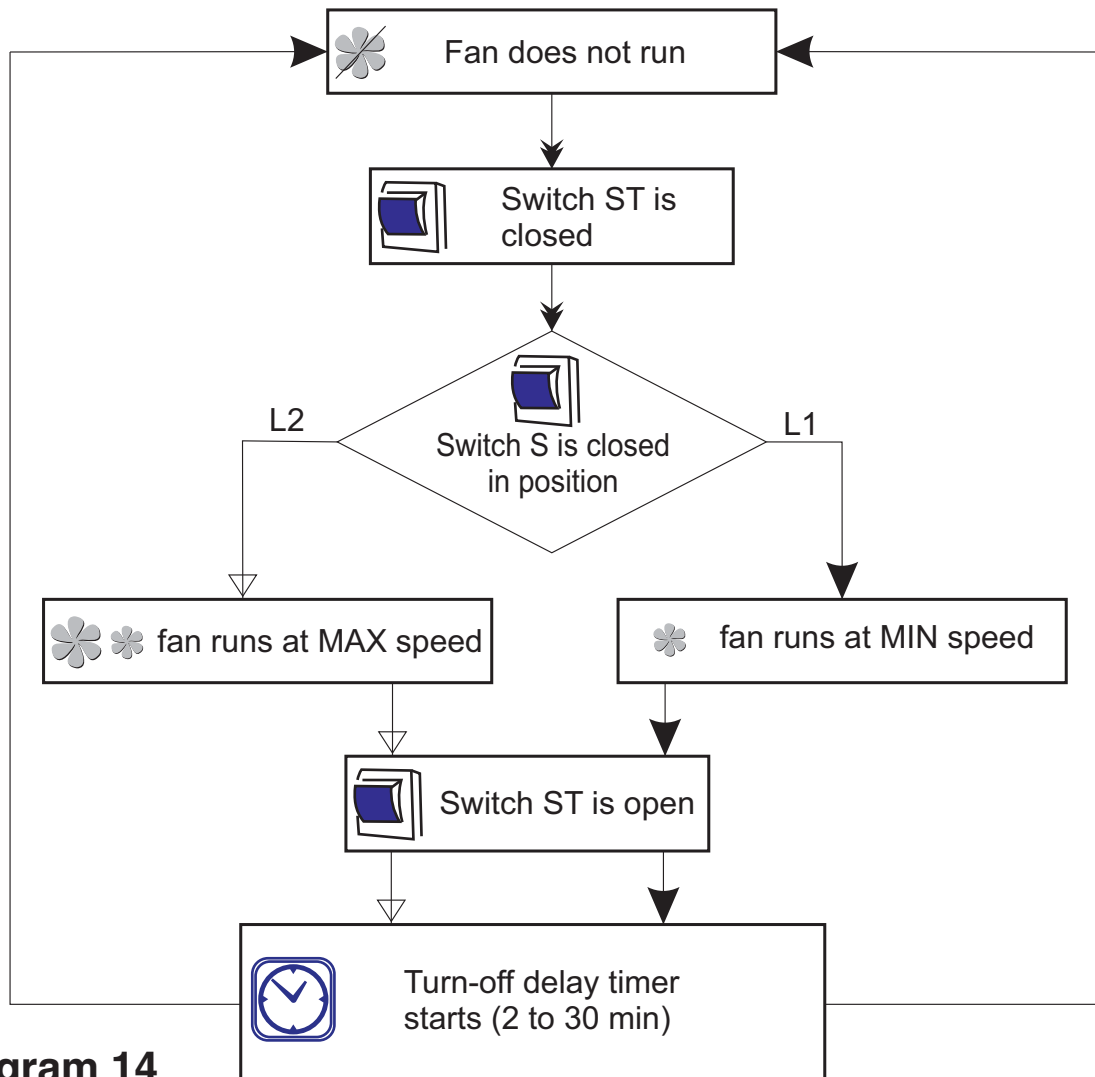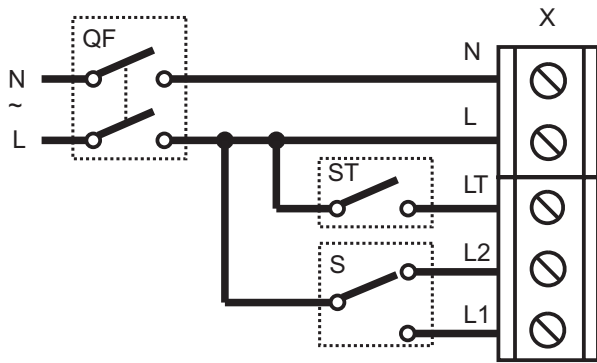


Wiring diagram 14

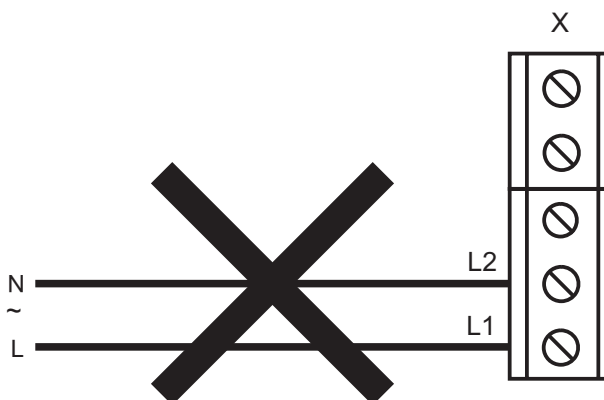


Wiring diagram 15

Iso-Mix 100/125 US

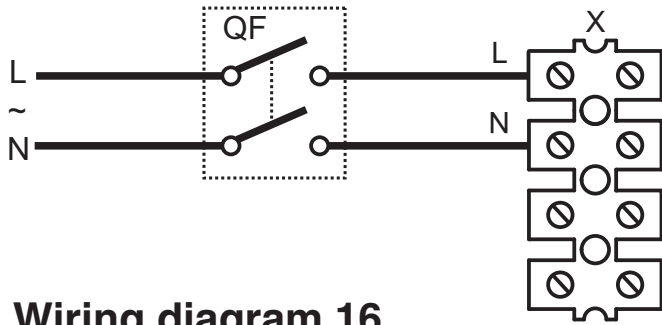


Wiring diagram 16

Iso-Mix 150/160/200/250/315 US

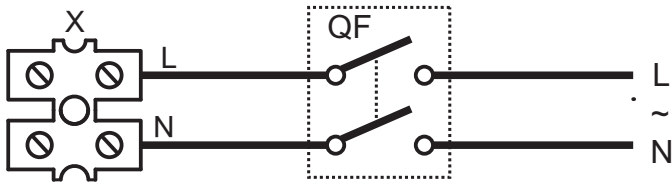

Wiring diagram 17

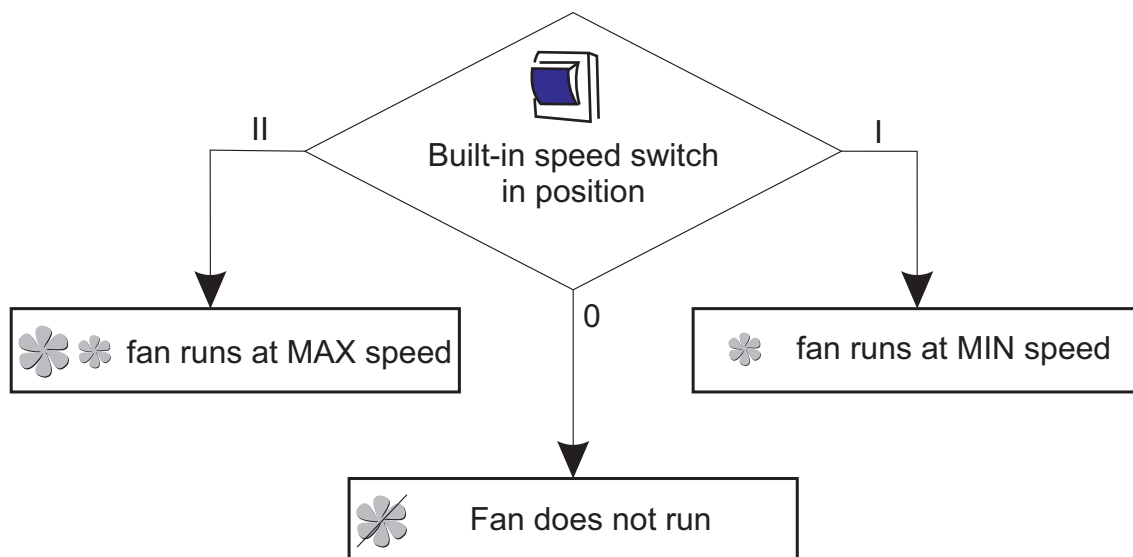

Mounting sequence for connection to power mains of the basic model with a built-in speed switch with no power cable and of a fan with a timer:

- cut power supply off by turning the electric switch QF to OFF position, fig. 12, 18, 24.
- remove the screws to detach the cover from the electric module and remove the cover, fig. 13, 19, 25.
- remove the screws of the retaining clamp and remove the retaining clamp, fig. 14, 20, 26.
- route the cable into the terminal box and fix the cable with the retaining clamp and the screws.
- select the fan operation mode - running at maximum speed, running at low speed or speed control with the external speed switch.
- connect the power cable to the fan input terminal block in compliance with a selected wiring diagram, fig. 15, 21, 27

Do not connect L and N terminals jointly to L1 und L2 terminals, refer wiring diagrams 4, 8 and 15.

- install the terminal box cover and fix it with screws, fig. 16, 22, 28.
- switch the fan on by turning the automatic switch to ON Position, fig. 17, 23, 29.

The Iso-Mix fan models with **W/W1/FR/G/G1/GI/GI1/GT/GT1/GTI/GTI1** options are equipped with a power cable with various adapter types and do not require any mounting operations for connection to power mains.

Iso-Mix 100/125

Fig. 12

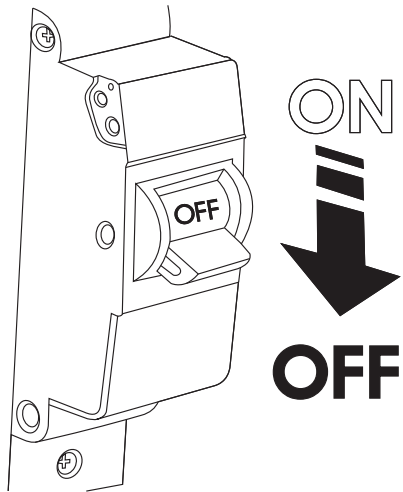


Fig. 13

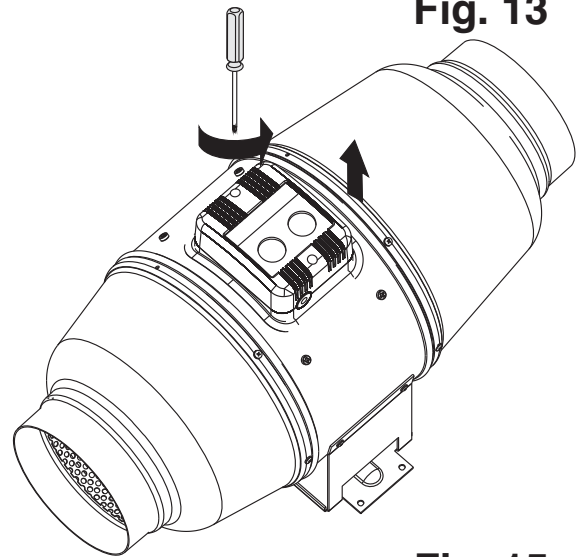


Fig. 14

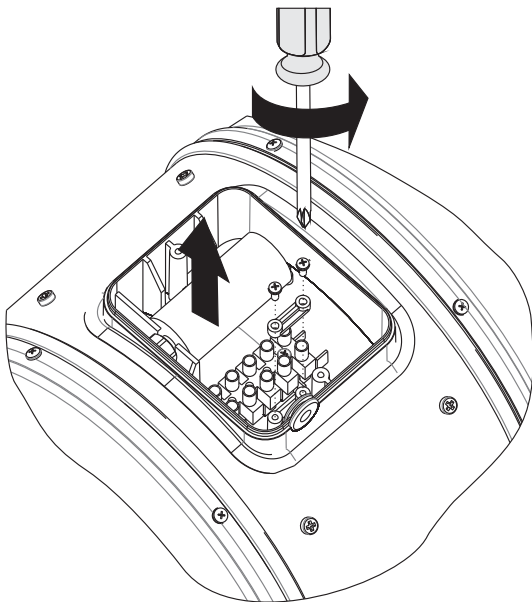


Fig. 15

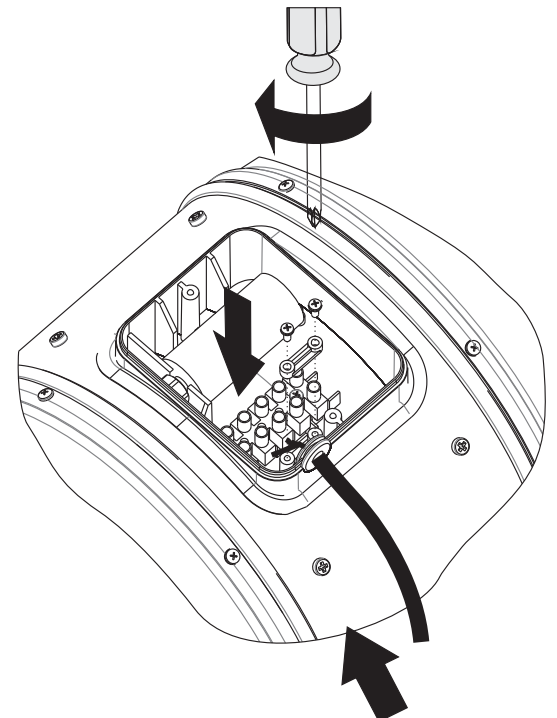


Fig. 16

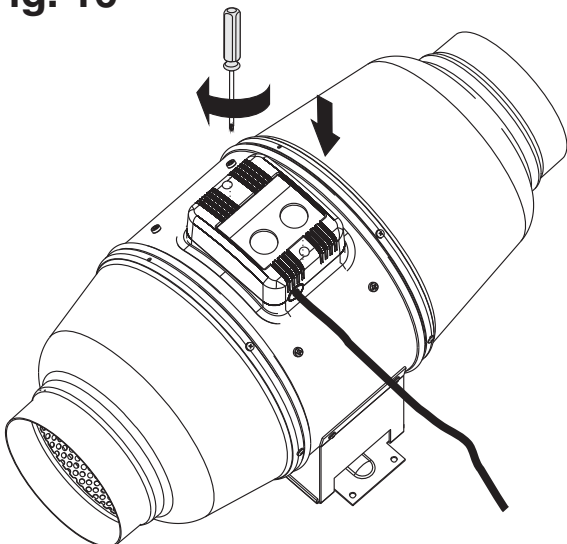


Fig. 17

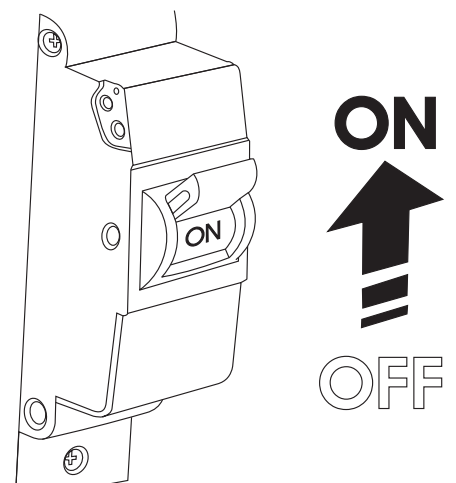


Fig. 18

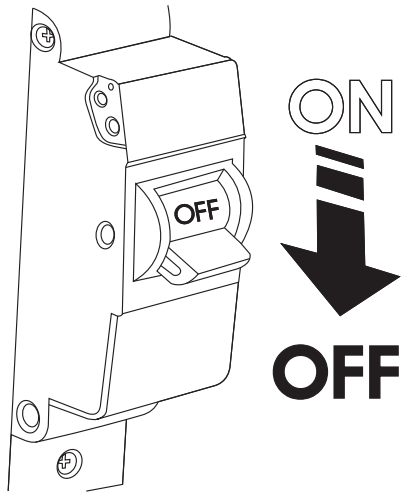


Fig. 19

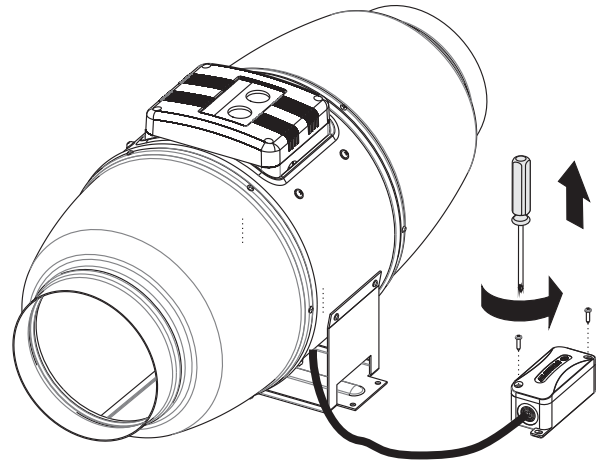


Fig. 20

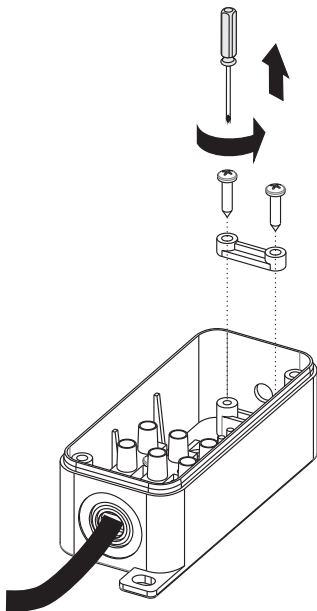


Fig. 21

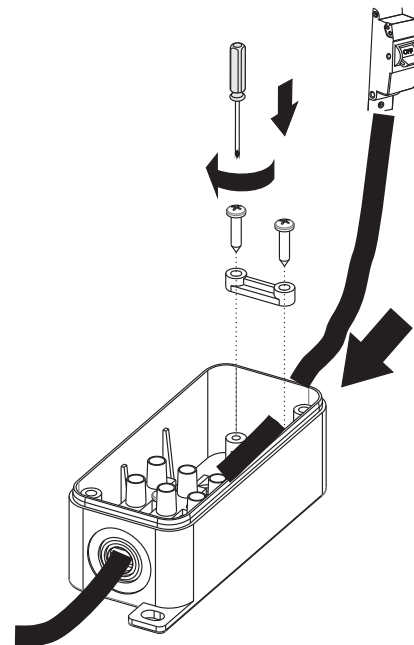


Fig. 22


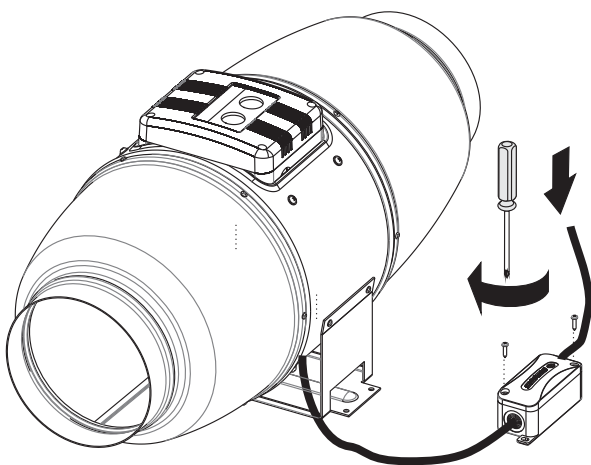


Fig. 23

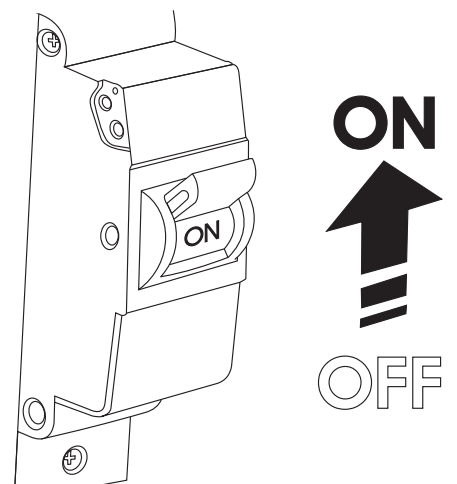

Iso-Mix 160/200/250/315

Fig. 24

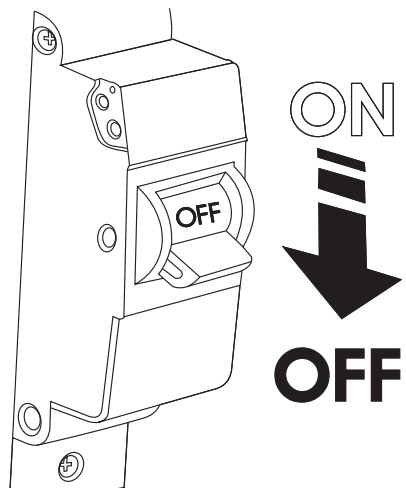


Fig. 25

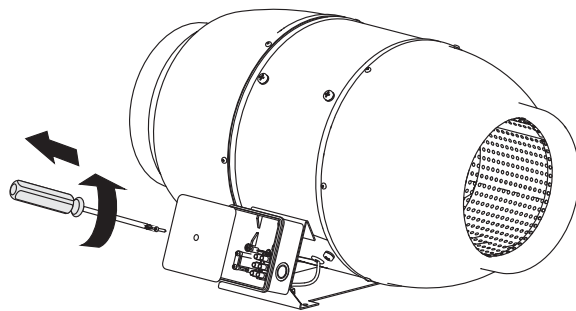


Fig. 26

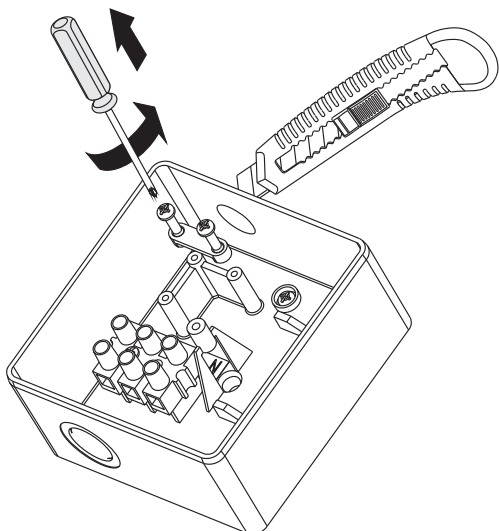


Fig. 27

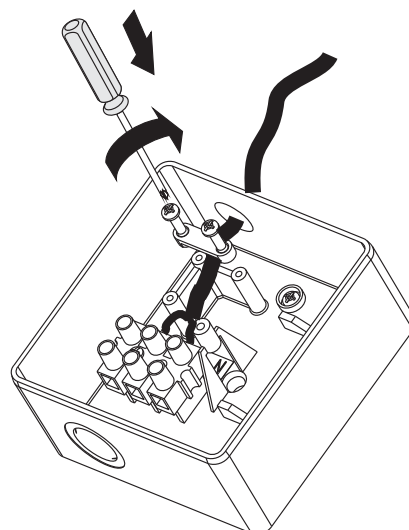


Fig. 28

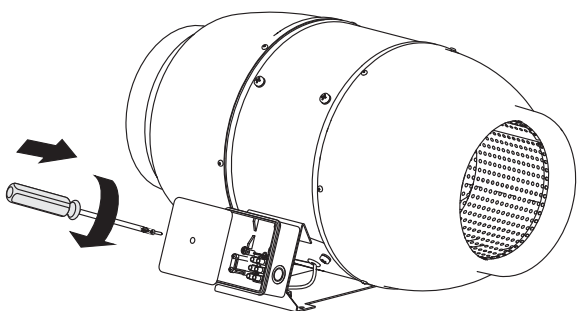


Fig. 29

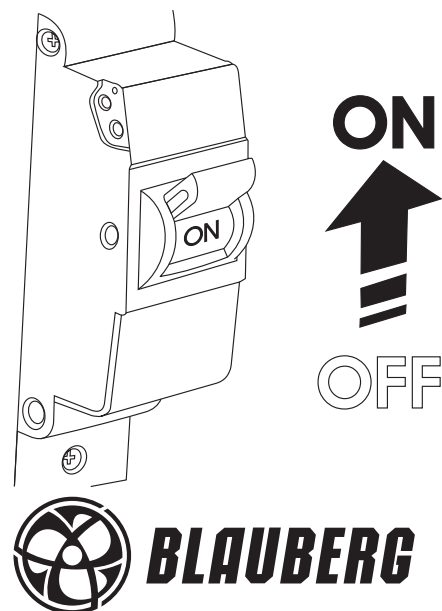


Fig. 30




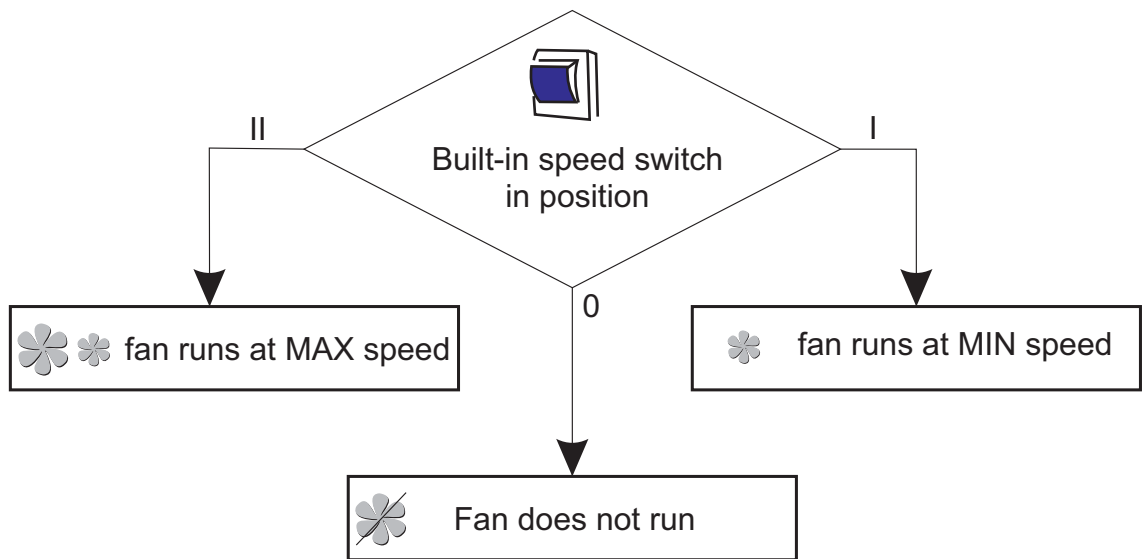



Fig. 31

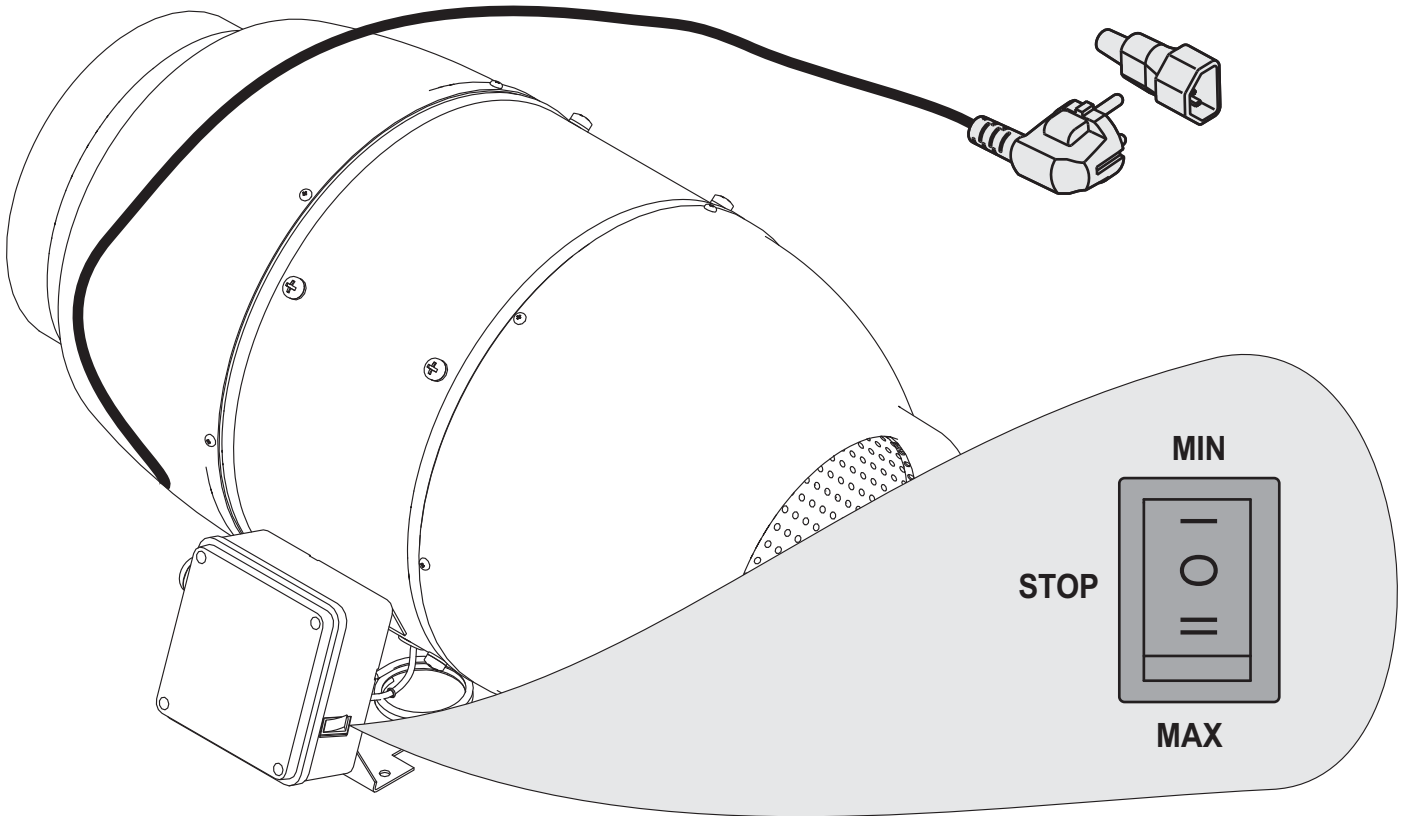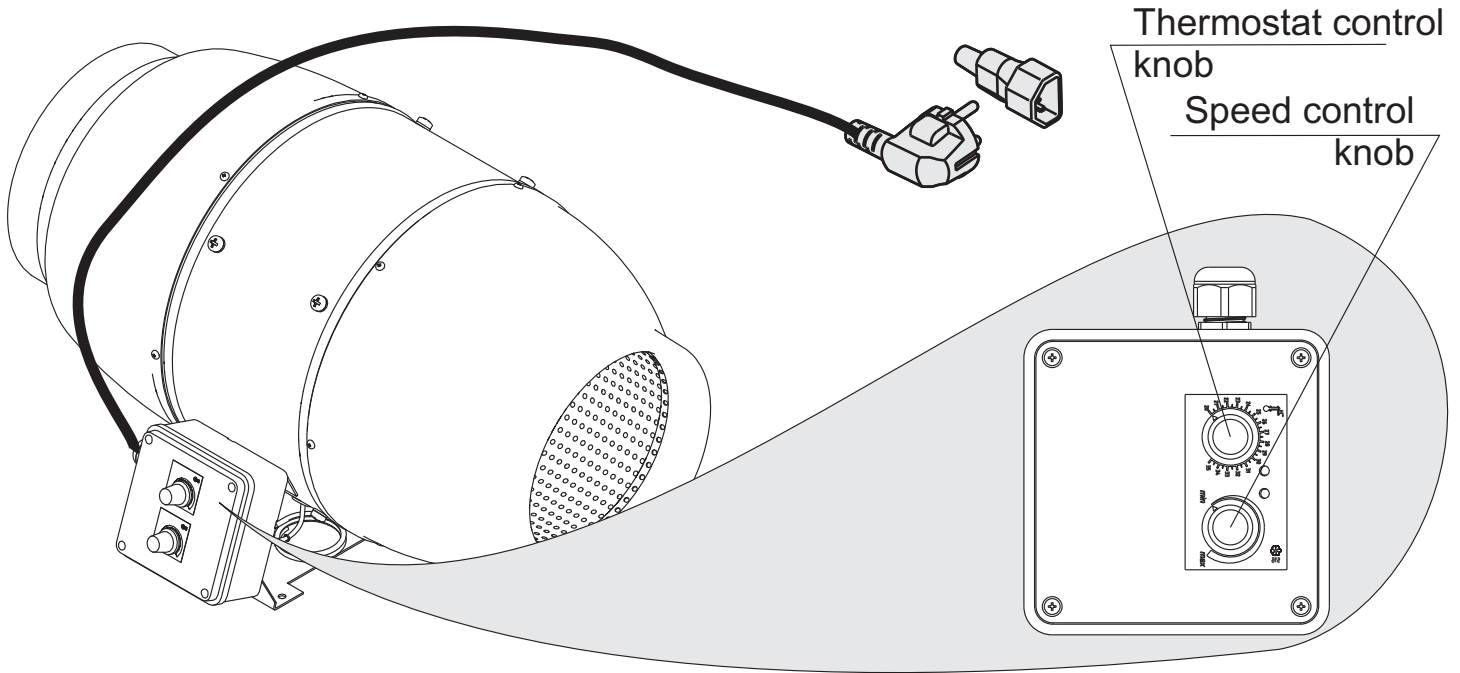

G/G1/G/GI1

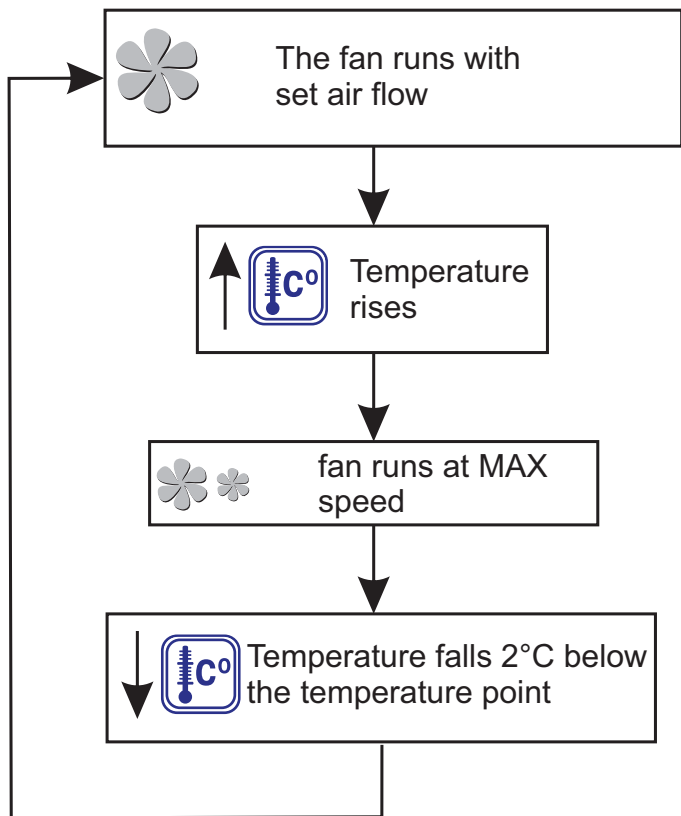


GT/GT1/GT/GT11

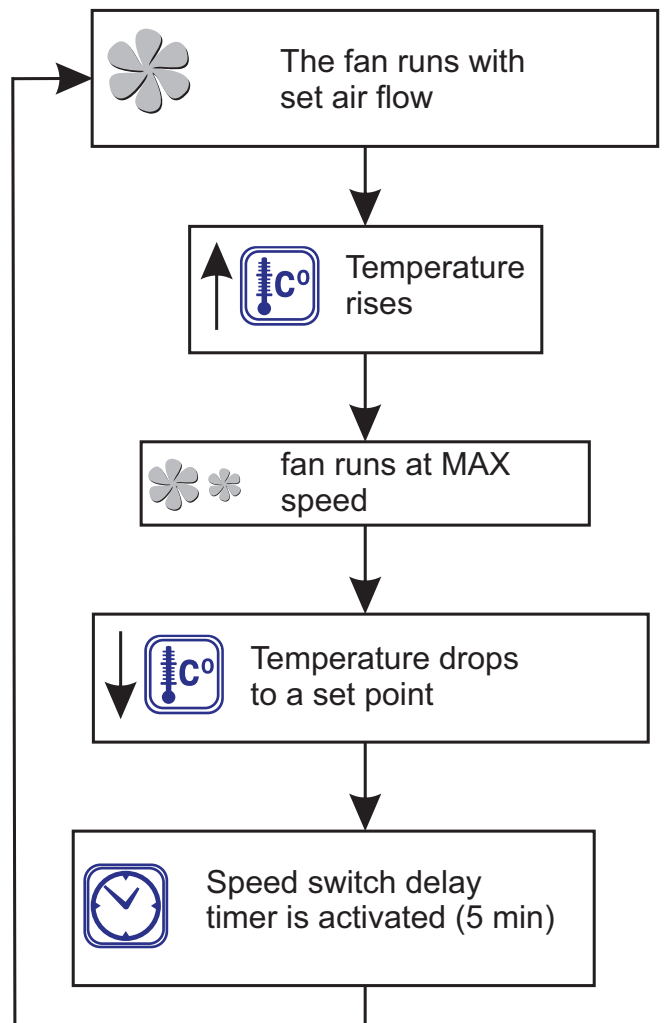


Iso-Mix 100/125/150/160/200/250/315 FR

Fig. 32

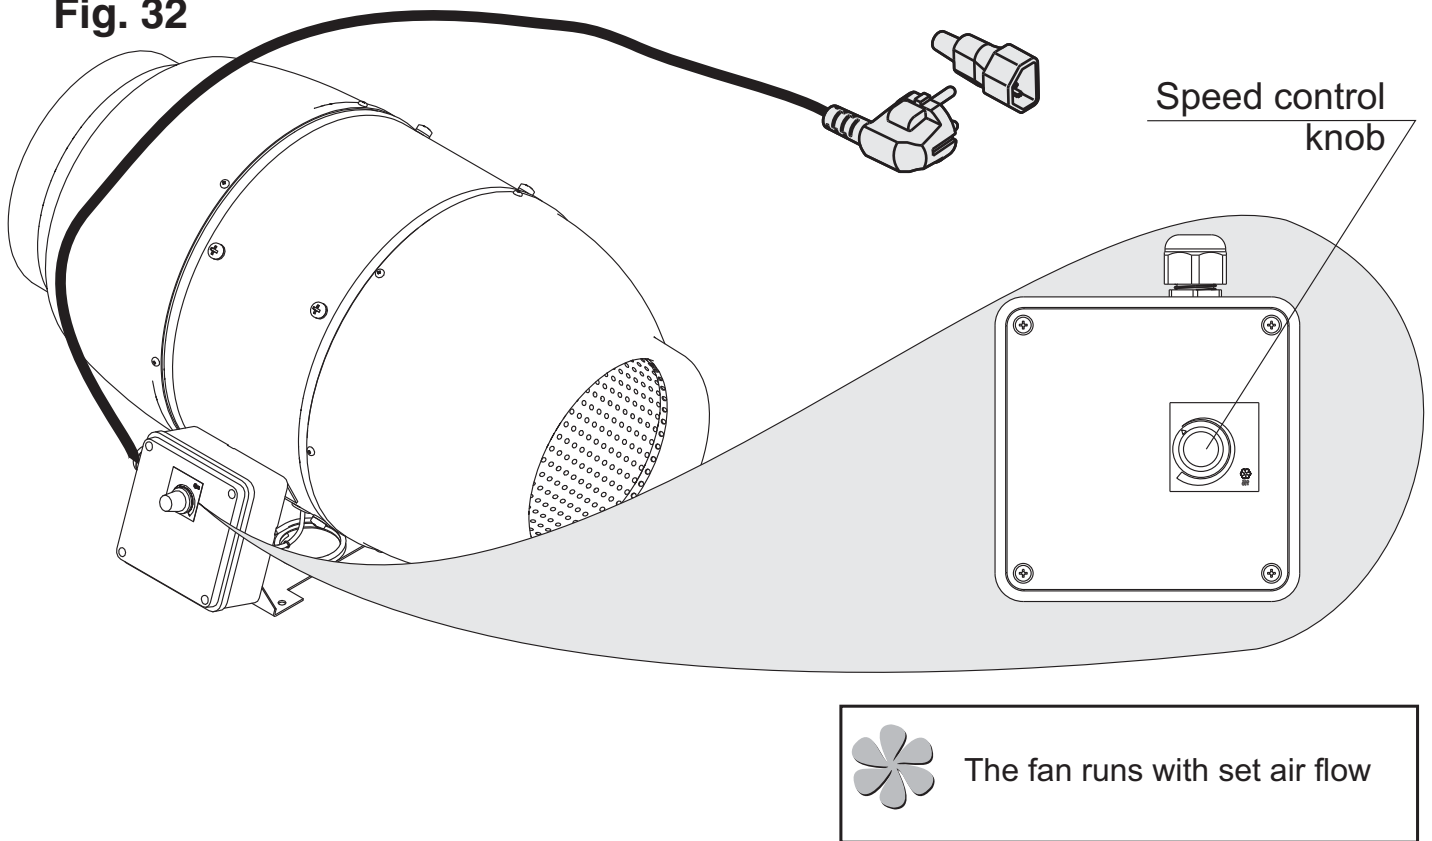

Iso-Mix 100/125/150/160/200/250/315 T

Fig. 33




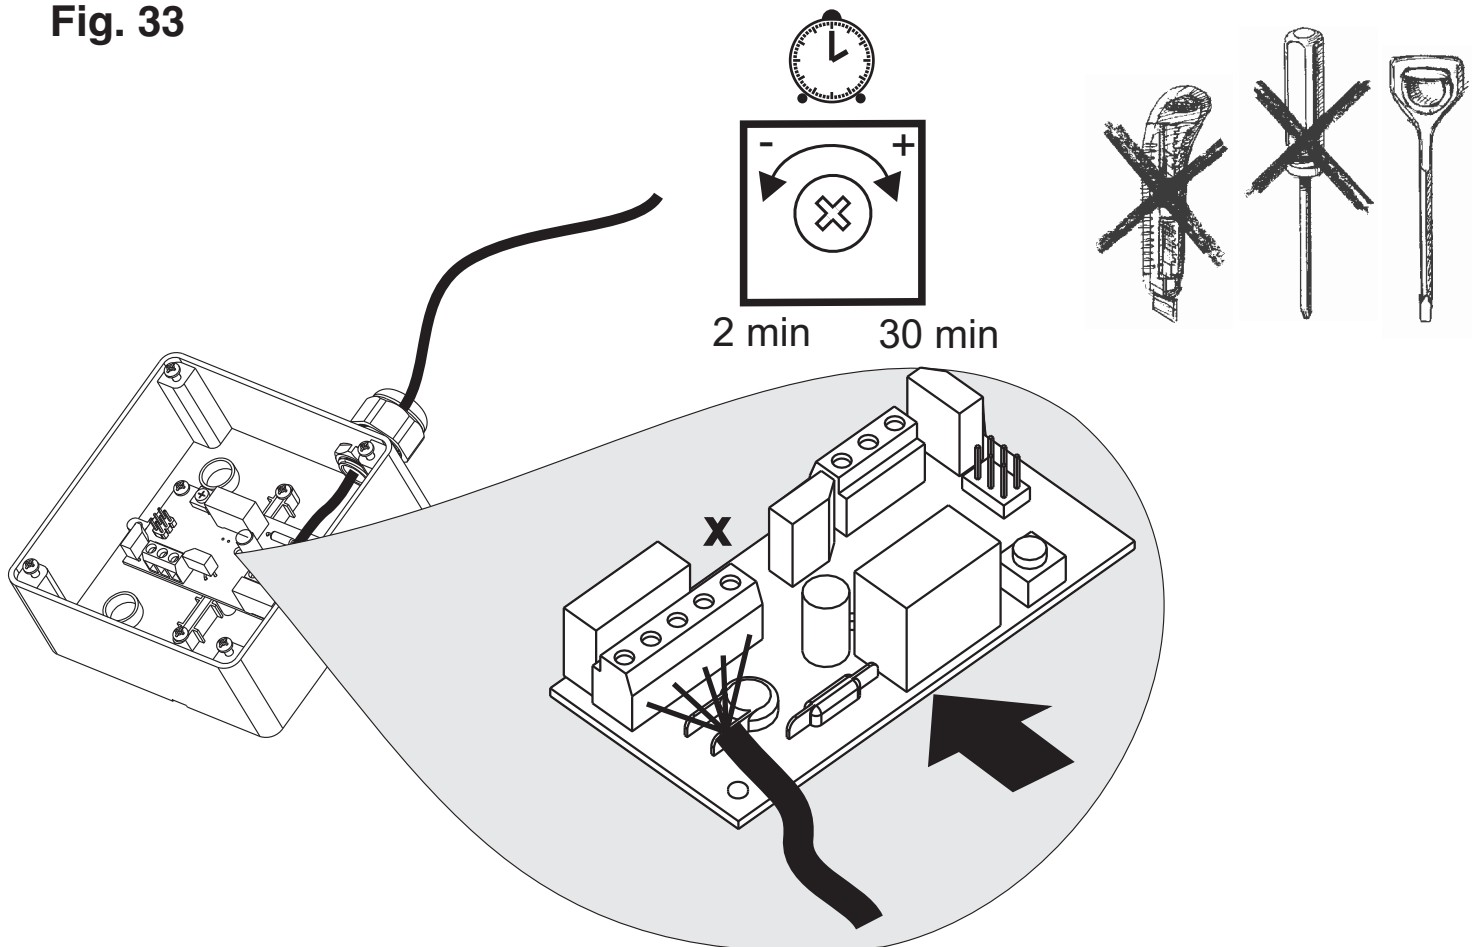


Any servicing and maintenance operations of the fan are allowed after it is disconnected from power mains only, fig. 34.

Maintenance means regular (at least once in 6 months) cleaning of the fan surfaces from dirt and dust.

To clean the fan, wipe its surfaces with a cloth wetted in a mild soap solution, then wipe the surfaces dry, fig. 35-37.

Avoid water dripping on the motor and circuit board!

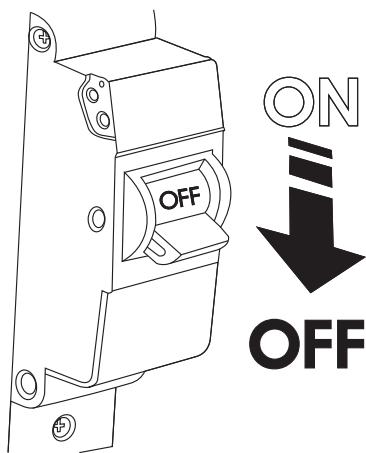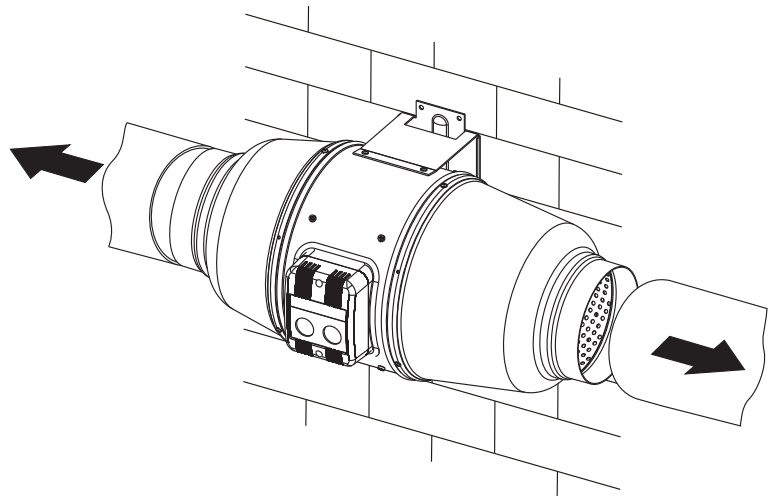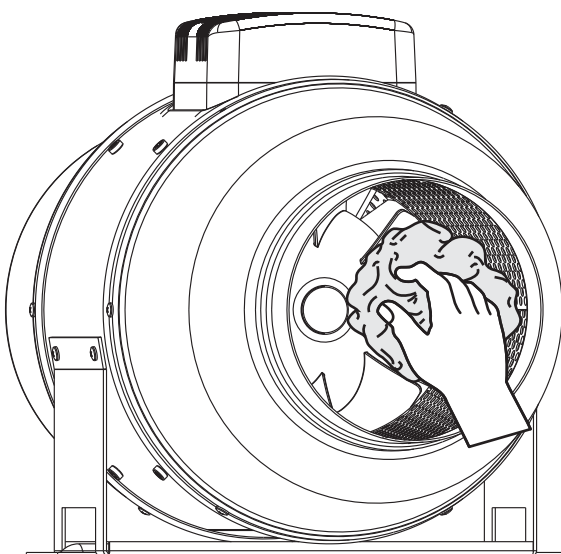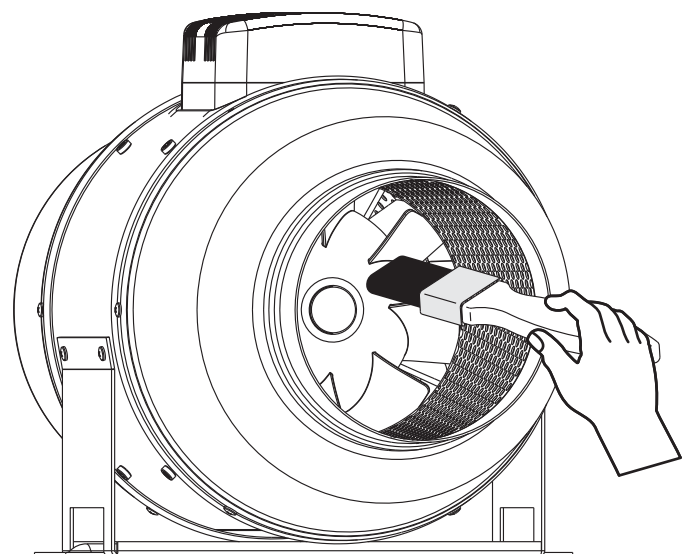Fig. 34**Fig. 35****Fig. 36****Fig. 37**

STORAGE AND TRANSPORTATION RULES

Transportation is allowed by any transportation vehicle provided that the product is in the manufacturer's original package.

Store the delivered product in the manufacturer's original packing box in a dry ventilated premise with the ambient temperature from +5°C up to + 40°C and relative humidity less than 80%.

The storage environment must be free of dust, acid or alkali vapours to prevent corrosion.

MANUFACTURER'S WARRANTY

The fan complies with the requirements according to the EU norms and directives, to the relevant EU-Low Voltage Equipment Directives, EU-Directives on Electromagnetic Compatibility.

We hereby declare that the following product complies with the essential protection requirements of Electromagnetic Council Directive 2004/108/EC, 89/336/EEC and Low Voltage Directive 2006/95/EC, 73/23/EEC and CE-marking Directive 93/68/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. This certificate is issued following test carried out on samples of the product referred to above. Assessment of compliance of the product with the requirements relating to electromagnetic compatibility was based on the following standards.

The fan does not require grounding. Protection according to IP rating against access to hazardous parts and water ingress - IPX4.

The manufacturer hereby warrants normal operation of the fan over the period of 2 years from the retail sale date provided observance of the installation and operation regulations. In case of failure due to faulty equipment during the warranty period the consumer has the right to exchange it.

If case of no confirmation of the sale date, the warranty term shall be calculated from the manufacturing date.

The MANUFACTURER shall not be liable for any damage resulting from any misuse of or gross mechanic interference with the fan.

Please follow the applicable instructions.

DISPOSAL

Do not dispose in domestic waste. The unit contains in part material that can be recycled and in part substances that should not end up as domestic waste.

Dispose of the product once it has reached the end of its working life according to the regulations valid where you are.



Fan is recognized as serviceable

Iso-Mix

100

125

150

160

200

250

315

US

G

GI

GT

GTI

FR

W

T

1

SALES DATE

MANUFACTURED ON (DATE)

SOLD

APPROVAL MARK

